PYLE®

PyleAudio.com

718.535.1800 718.236.2400 (fax)
1600 63rd Street, Brooklyn NY 11204

PYLE®

PWMA-260

OPERATING INSTRUCTIONS

300 WATT WIRELESS RECHARGEABLE PORTABLE
PA SYSTEM WITH LAVALIER/HEADSET MICROPHONE

www.pyleaudio.com

GENERAL DESCRIPTIONS:

1.It is consist of one set of of wireless and two wired microphone input circuits, both of them has separated volume control.
2.The standard accessories are VHF high band wireless transmitter and receiver.
3.It is equipped with built-in 7AH/12V rechargeable battery which can be charge 6 hours continuously, also DC power can be used directly
4.One guitar input function, one audio input and one iPod dock are supplied.
5.Treble and bass control are supplied.
6.Echo control is supplied.
7.With voltage selector switch for selecting a suitable one according to different countries.
8.8 " full range driver

REMARKS

1.Correct power must be used, don't use any other power except the specified one.
2.Don't drag the power cable when pull out the plugs, just hold the plug to pull it out from socket.
3.Don't open chassis: it is very dangerous either open the chassis or put your hand inside the chassis, don't do it. If the device is not under normal working, pull out the plug at once and contact your retailer or nearest distributor.
4.Don't take volatile solvent such as toluene, alcohol, gasoline to clean the surface.
5.Please don't put it in a unventilated environment or at direct sunlight in summer.
6.Avoid moisture or rain

PARAMETER

AMPLIFIER

Power supply:	□AC200V/50Hz □AC110V/60Hz
	including a built-in 12V7AH rechargeable battery
Frequency response:	35Hz-20KHz
SPL:	94dB (1W/M)
T.H.D.	<1%
Input wired mic	-58dBV 600
Speaker:	8 " full range driver
RMS Power.	300W
Input jack:	2 × 1/4 " wired mic jack, 1 × 1/4 " GUITAR IN jack
	1 × Audio input jack

RECEIVER

Carrier frequency range:	170-216 MHz
RF sensitivity	≤-101dB
Image rejection:	≥60dB
Operation range:	100ft

TRANSMITTER

Carrier frequency range	170-216 MHz
RF power output:	≤10mW
Modulation level:	15K
Operation temperature:	-18℃-60℃
Power supply.	3V
Unit Battery Life:	Approx.3 Hours
Mic Battery Life:	Approx.45 Hours

INSTRUCTIONS

⑥ Push the Power Switch of handheld microphone(bodypack transmitter) to ON position, your sound can be heard from amplifier when speaking. Adjust the Volume Control/Echo Control/Treble Control/Bass Control to proper position to avoid feedback.

⑦ If the Power Indicator of microphone (bodypack transmitter) comes on at all times, it indicates the battery lack of power, please replace the battery.

⑧ Connect relative cable of guitar with Guitar Input Jack on this system, you can play wonderful music.

⑨ IPOD Dock: Connect IPOD to IPOD dock, you can press "Play", "Pause", "Pre" and "Next" keys to control it. And unit will charge IPOD automatically once it is connected to the dock till IPOD battery is full so that no need to press "Charge" key to get IPOD charged. During charging, you can play IPOD at the same time.

3. Wired Microphone:

① Two way wired microphone input jacks are supplied for two people us simultaneously.

② Plug Wired microphones into the jacks separately.

③ Adjust Echo Control to get better sound.

④ Adjust the volume of each microphone to make sure the sound is satisfactory.

SYSTEM FUNCTION FIGURE

1.Wireless Mic/MIC1 Volume Control	10.Bass Control
2.MIC2 Volume Control	11.Audio Input Jack
3.Guitar Volume Control	12.Guitar Input Jack
4.Audio Volume Control	13.MIC2 Input Jack
5.AUDIO.OUT JACK	14.Vent Hole
6.Ipod/MP3 Volume Control	15.Fixed Stand For The Uint
7.Echo Control	16.Vent Hole
8.Treble Control	17.Woofer Speaker
9.Metal Corner	18.MIC1 Input Jack
	19.Power Switch

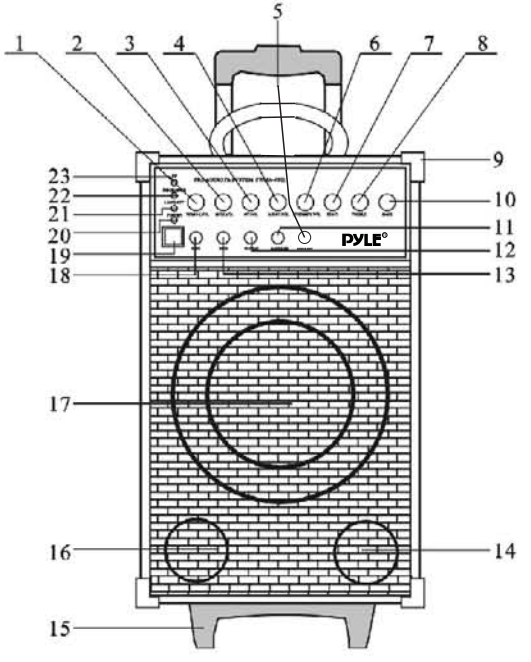

SYSTEM FUNCTION FIGURE

20.Power Indicator
21.Low Voltage Indicator
22.Charge Indicator
23.RF Indicator For Wireless Mic
24.Trailer Handle
25.Heating Pane
26.Handle
27.Voltage Selector Switch
28.Battery Fuse
29.External DC Input Jack
30.AC Fuse
31.Power Socket
32.Warning
33.Rechargeable Battery Cover
34.5AH/12V Rechargeable Battery
35.Truckle Of Trailer
36. Livelier Mic
37. Headset Mic

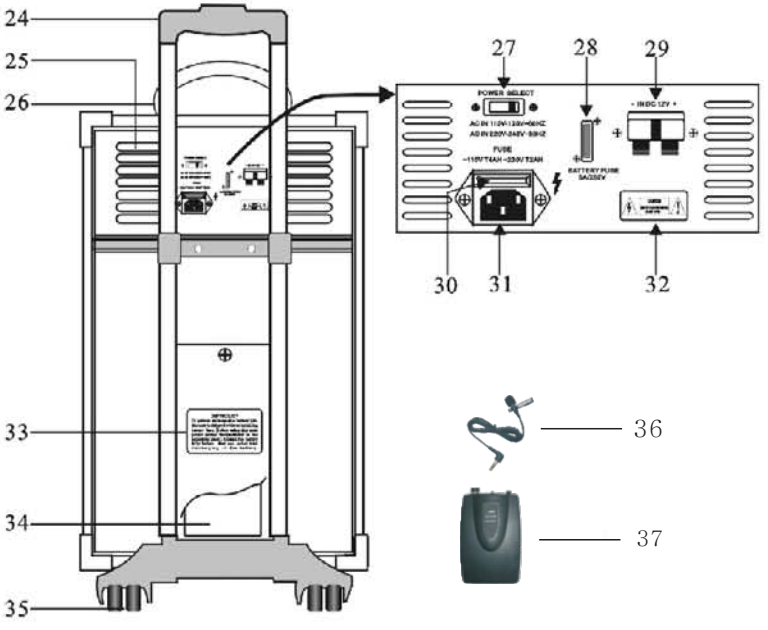

INSTRUCTIONS

1. Confirm the power

① AC Power: Before operation, please confirm the voltage is same as the specified one marked on the label. If not, the unit will be damaged.
② Built-in Rechargeable Battery: You needn't plug-in the AC power when the voltage for rechargeable battery is enough but use the battery directly.
③ When the Low Voltage Indicator comes yellow, it indicates the battery voltage is not enough, please charge it in time.
④ When the Low Voltage Indicator comes out, it indicates the voltage is standard now.
⑤ If the unit is not used for a long time, please charge the rechargeable battery every 2 months, 8-10 hours for each time.

2. Operation Instructions:

① Plug the power cable into the socket and connect it with this amplifier system.
② Switch on the amplifier, the Power Indicator comes red.
③ During charging, RECHARGE indicator comes red, when the indicator flashing, that means battery is amost full while it is ready all indicators will off.
④ During charging, you can play music at the same time, then RECHARGE indicator will flashing with the current comsuption indicating the speed of charge. Charge time is in direct proportion to the volume of music. When the battery is full, RECHARGE indicator will stop flashing and then off.
⑤ Put two AA 1.5V battery into handheld microphone (bodypack transmitter), push the Power Switch to middle, the Power Indicator will flash once, RF Indicator comes on green, the speakers are quiet.